



# OWNER'S MANUAL

## DWCPPADESB

### Peter Erskine's Stand-Alone Stick Bag

*Thanks for purchasing this DW product. It has been designed and manufactured to provide a lifetime of trouble-free service. Please take a moment to familiarize yourself with the exclusive features and operating suggestions contained in this manual in order to ensure its optimum performance. Should you have any further questions, feel free to contact your local authorized DW dealer.*

— Don Lombardi  
President, Drum Workshop, Inc.



DWCPPADESB

# dw

The Drummer's Choice®

**DRUM WORKSHOP, INC**

3450 Lunar Court • Oxnard, CA 93030 USA

[www.dwdrums.com](http://www.dwdrums.com)

specifications subject to change without notice  
© DW 2008





## DWCPPADESB Peter Erskine's Stand-Alone Stick Bag

Our product features genuine VELCRO® Brand fasteners

### Assembly:

#### Step 1:

First, place the bag face down with the "Stand-Alone Stick Bag" logo facing the floor. Right below the center logo **A** on the back you will find a Velcro® Brand strap **B** holding the bag together.



#### Step 2:

Pull apart the Velcro® Brand strap **A** to open the bag. Pull the Velcro® Brand strap through **B** the ring attached to the bottom of the bag. Receiver facing down.



#### Step 3:

Lift open the exposed flaps to form an "L" shape.



#### Step 4:

Next, take the short flap and extend it to the end of the bag, forming a pyramid shape or 'triangle.'



#### Step 5:

Reconnect the Velcro® Brand strap through the ring attached to bottom section of the bag.



#### Step 6:

Inside the 'triangle' there is a rectangular Velcro® Brand flap. Take this flap and attach it to the back of the flap that holds the tripod receiver.



#### Step 7:

Next, place the bag right side up, with the flap holding the tripod receiver facing down.



#### Step 8:

To open the front section of the Stand-Alone Stick Bag (the section with the "Stand-Alone Stick Bag" logo), unzip the two zippers and pull open the long front flap.



#### Step 9:

Flip the long front flap over the top and behind the bag.



#### Step 10:

Bend the small upper flap inward and align the Velcro® Brand to attach this flap to the back of the bag. Optionally, you can put the strap of the stick bag just above the Velcro® Brand to keep the strap tucked away. This will form a small platform on the top of the bag.



#### Step 11:

To open the tripod base, turn it over and loosen the wing nut at the bottom. Using the bent thumb latch, rotate the locking plate underneath to allow the three legs to move freely.



#### Step 12:

Once the lock plate and legs are aligned, pull each leg down one by one.



#### Step 13:

Rotate the lock plate to lock the three legs in the standing position. Tighten the wing nut to lock the legs in place.

#### Step 14:

There is a tripod receiver on the bottom of the stick bag. This is where the tripod will be inserted.



#### Step 15:

Loosen the thumbscrew on the receiver to prepare for the tripod. Align the tripod receiver of the stick bag to the top of the tripod.



#### Step 16:

You can adjust the height of the Stand-Alone Stick Bag by loosening and tightening the thumbscrew. Thanks to this height-adjustable feature, the Stand-Alone Stick Bag works for drummers as well as percussionists!